



This guide is intended for guick consultation only and does not replace the user and maintenance manual. Before using this machine, read the user maintenance manual contained in the machine's packaging and follow all the instructions.


### **PREPARATION AND OPERATION**

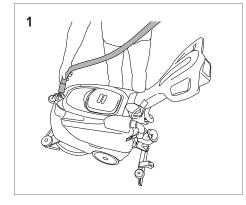


Add water and detergent to solution tank.

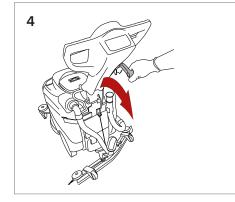


Pull squeegee lever to lower.

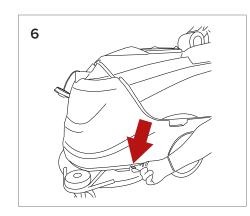


Turn valve manually to adjust water level.

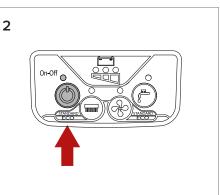

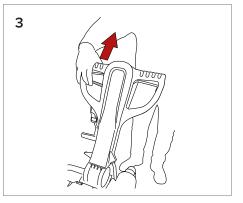

Power on.


Pull up on lever to adjust the angle of the handle.

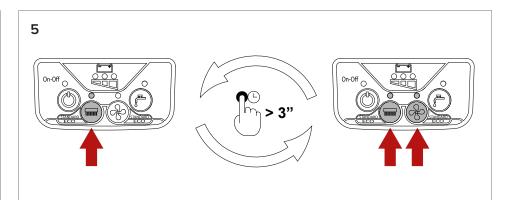

motor ON or OFF.

driver motor, or vacuum or Vacuum button for 3 or OFF.

Press once to turn pad Press and hold pad driver When ECO mode is activated, the Pad driver and Vacuum light will flash sec. to turn ECO mode ON continuously. ECO mode reduces power of motor by 20% to reduce battery consumption.

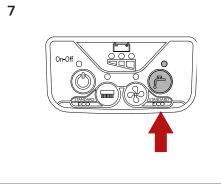



Press once to turn water ON or OFF.

8

Pull lever to activate scrubber.

### DAILY MAINTENANCE

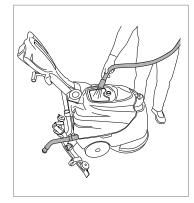

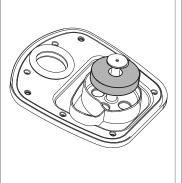




Clean the dirty water tank.

Make sure the lids outer seal is clean and not damaged. Replace if necessary. Make sure detergent outlet filter is clean and free of debris.

Make sure the pad driver is clean and not worn out. Replace if necessary.

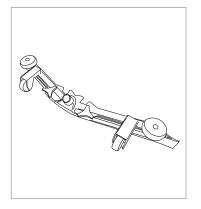

# TO CHARGE BATTERIES

 
Plug in On Board charger to charge batteries if equipped.

 
**NOTE:** Never stop charge until cycle is complete (green light).



Make sure the squeegee is clean and the blades are not worn.

## **REPLACING THE SQUEEGEE BLADES**





Open the clip (Ref. 1).

Remove the two blade retainers (Ref. 2) by pushing them outwards then extracting them.

Remove the blade.

Reuse the same blade by reversing the edge in contact with the floor until all four edges are worn out, or replace with a new blade, fitting it onto the screws on the body of the squeegee.

Reposition the two blade pressing devices by centering the wider part of the slots on the squeegee body fastening pins, then push the blade pressing devices inwards.

Close the hook again.

Replace the squeegee on its support, following the instructions described previously.

## ATTACHING/REMOVING THE PAD DRIVER

Position the pad driver underneath the head, in the centre (single-brush floor scrubber), position the pad driver underneath the head on both sides (double brush scrubber), switch the machine on.

Press the ON-OFF switch, once after starting the machine releases pad driver attachment. The button is only enabled when all the functions are deactivated (suction motor and pad driver).