

This guide is intended for quick consultation only and does not replace the user and maintenance manual. Before using this machine, read the user maintenance manual contained in the machine's packaging and follow all the instructions.


PREPARATION AND OPERATION

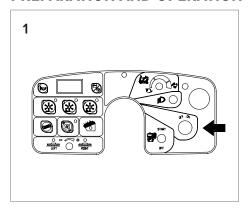


Disengage parking brake by pressing on the brake pedal.

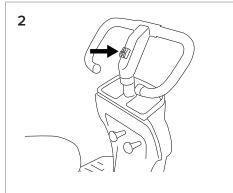


Power on.

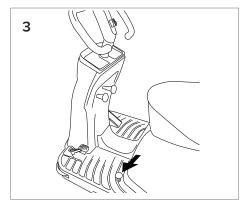


Pull and push down lever to lower side brushes.

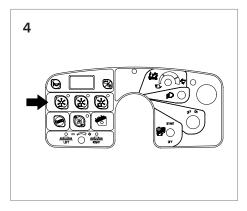


Push to select brush pressure.

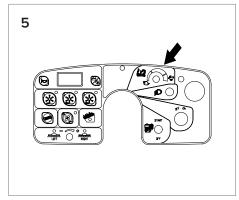


Toggle switch to change drive direction to Forward or Reverse.

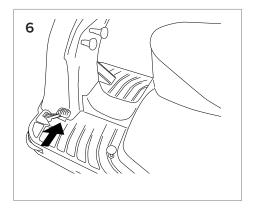

Press accelerator pedal to activate drive.

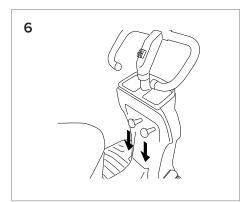

Turn to adjust travel speed.

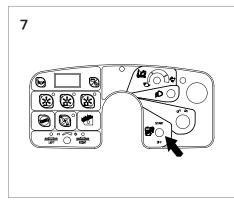


Press and hold for +3 sec. to manually activate filter shaker.

EMPTYING THE BIN

Release the bin lock.


Pull out the rear bin by means of its handle.

Take the bin (which is fitted to the wheels) to the rubbish collection point and empty it.

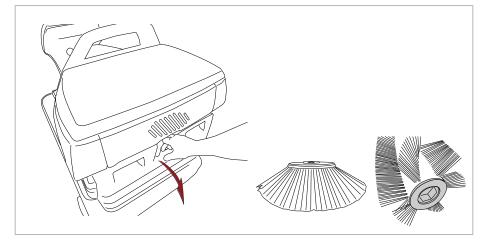

WEEKLY MAINTENANCE

Check the level of electrolyte in the batteries, if using acid batteries.

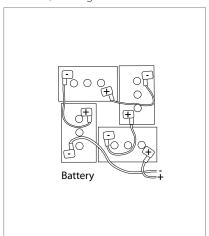

INSPECTING AND REPLACING THE CENTRE BRUSH

Unscrew the knob and open the door on the left of the machine.

Unscrew the three knobs securing the brush compartment cover.


Pull out the brush cover compartment.

Remove the brush, holding it on the plastic core.

Remove the adapter from the core of the old brush and fit it to the new brush, taking care to keep the bristles aligned in the same direction.

Fit the new brush and make sure that the adapter is inserted on the drive hub.

Replace the brush compartment cover using the knobs, following the dismantling operations in reverse order.

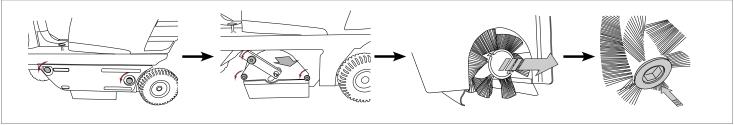

ADJUSTING SIDE BRUSH HEIGHT

Move the side brush to the working position.

Loosen the adjustment screws on the brush motor support.

Manually move the brush to the required position.

Tighten the adjustment screws.

