




Gladiator 1404


Quick Guide

This guide is intended for quick consultation only and does not replace the user and maintenance manual. Before using this machine, read the user maintenance manual contained in the machine's packaging and follow all the instructions.


PREPARATION AND OPERATION

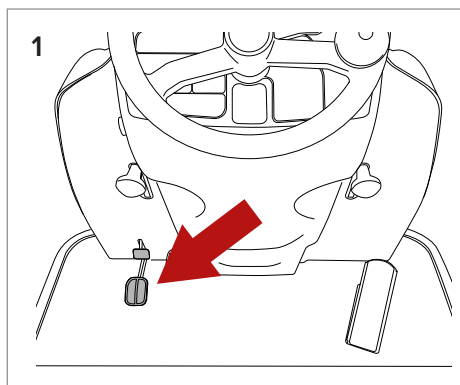


1 Disengage parking brake by pressing on the brake pedal.

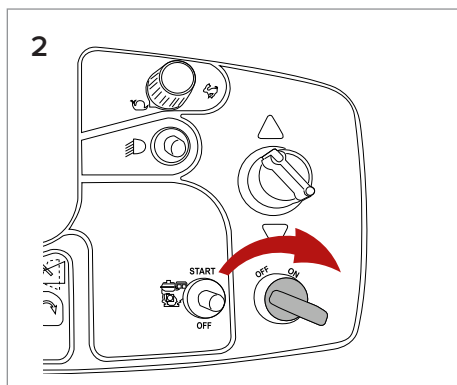


2 Power on.

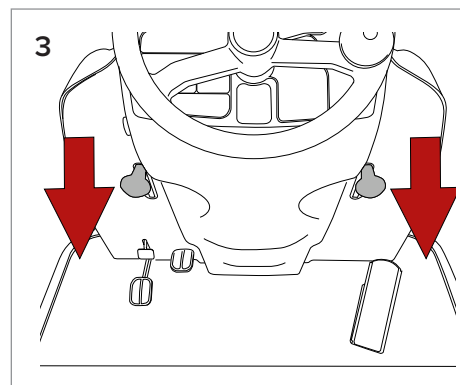


3 Pull and push down lever to lower side brushes.

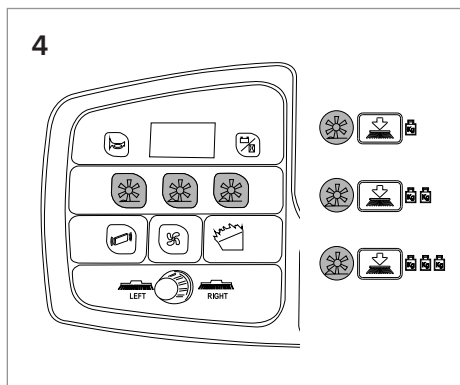


4 Push to select brush pressure.

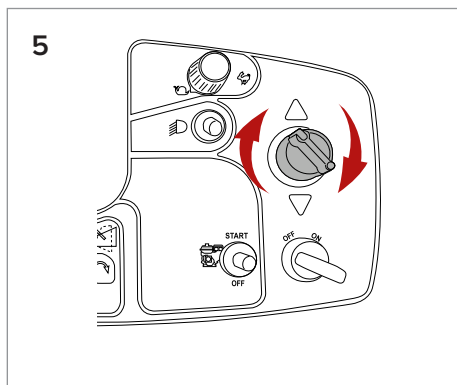


5 Toggle switch to change drive direction to Forward or Reverse.

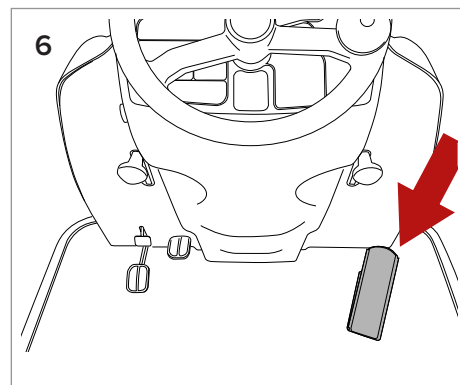


6 Press accelerator pedal to activate drive.

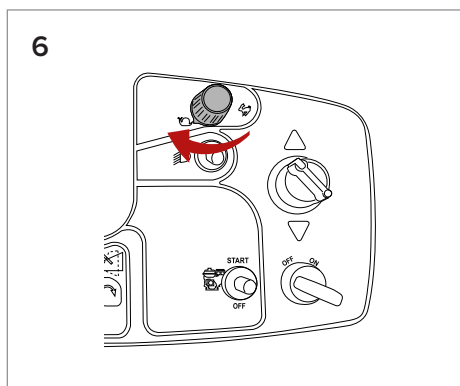


6 Turn to adjust travel speed.

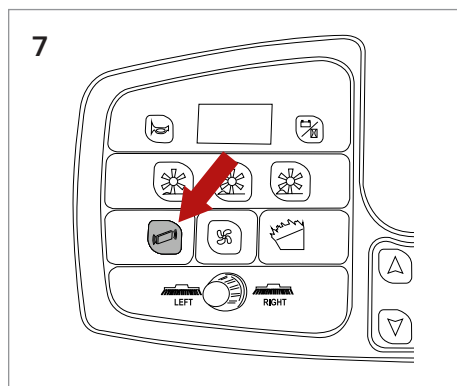


7 Press and hold for +3 sec. to manually activate filter shaker.

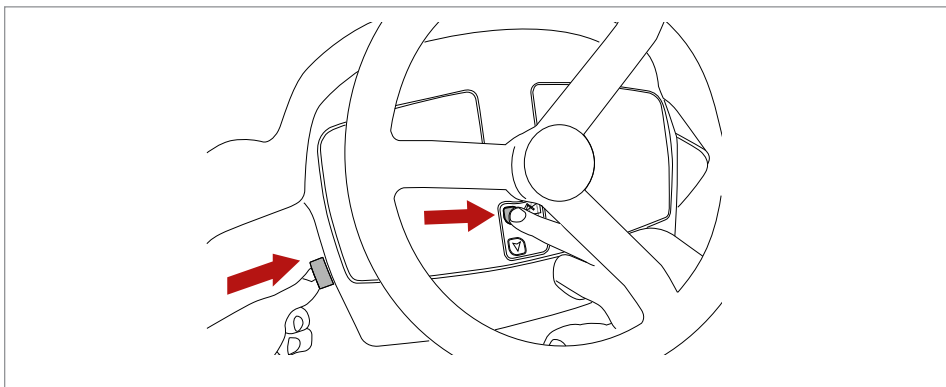


Press switch to lift tray.

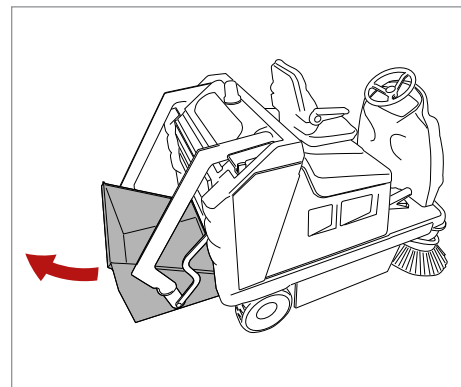

Pull lever to tip tray.

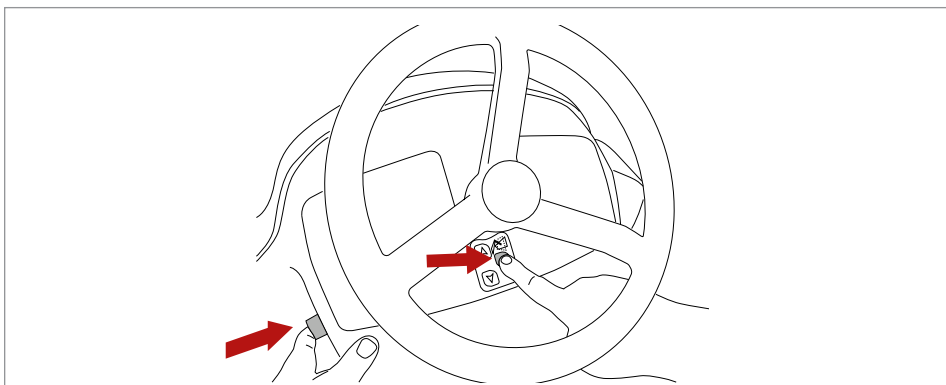


Press switch to adjust level.

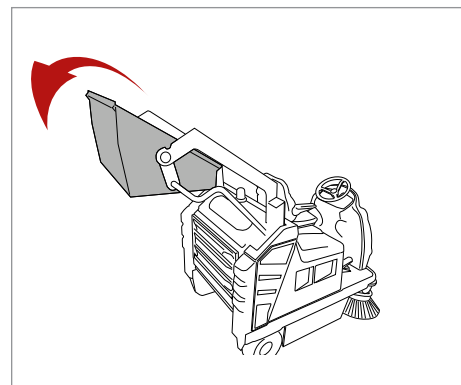


Empty tray.


DAILY MAINTENANCE

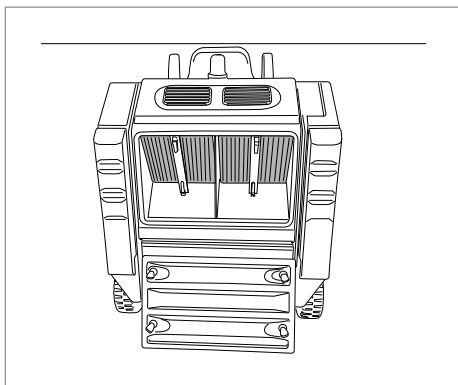

Check that the suction filters are tight and clean.

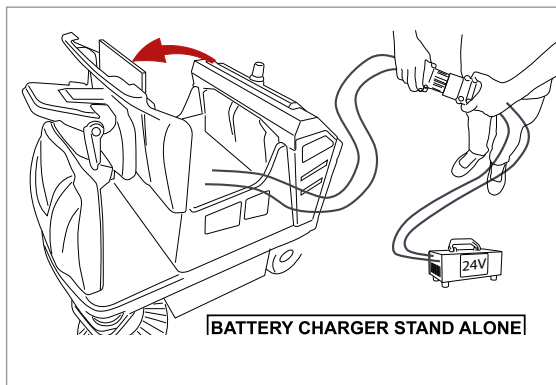

Charge machine.

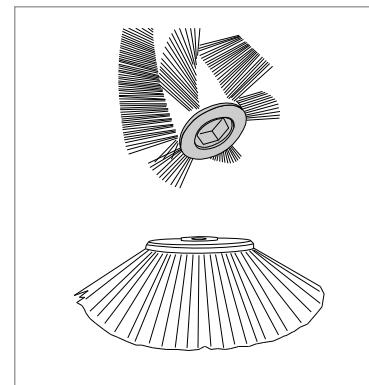

Check and remove any debris wrapped around the side brushes and on the central brush.